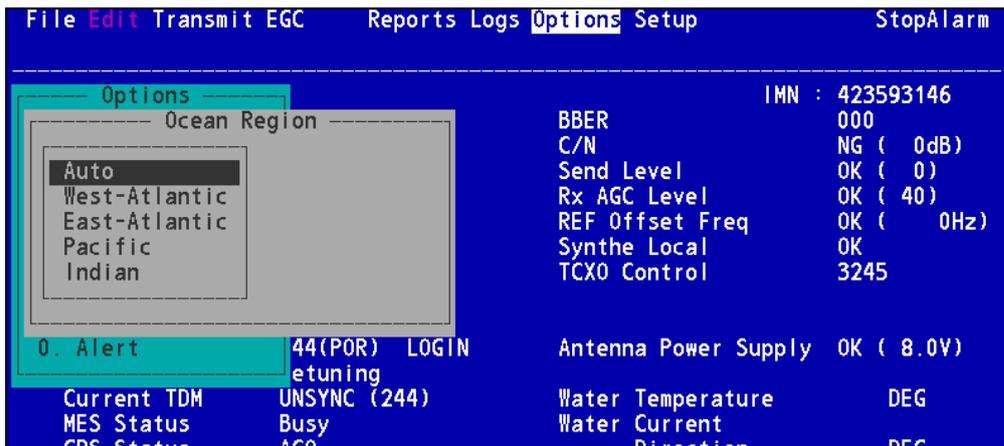


14<sup>th</sup> May 2018

## How to change the Ocean Region

In order to select the appropriate sea area after the caution “Synchronization loss” occurs, the following procedure should be implemented:

1. Press F7 to open the “Options” menu dialogue;
2. Select “Ocean Region” from the menu dialogue to open the dialogue box for Ocean Region; and
3. Select either “Auto” or appropriate satellite depending upon the position of the ship as shown in the figure 1 below.



**Figure 1 Ocean Region selector dialogue box**

NOTE: When “Auto” is pressed, the FELCOM 18 will start scanning the satellite appropriate to the sea area the own ship is in.